



VIDEO ENTERTAINMENT SYSTEM

OWNERS MANUAL

ROSEN
TELEVISION

TABLE OF CONTENTS

- 1-1 FPD Monitor in Overhead Console
The operation of the LCD monitor
- 2-1 Remote Control and OSM (On-Screen Menus)
The operation of the system remote control and OSM
- 3-1 Rosen VCP (Video Cassette Player)
The operation of the optional VCP
- 4-1 System Audio
The operation of the audio system
- 5-1 TV Tuner
The operation of the television tuner
- 6-1 Auxiliary Equipment
The interface for user-supplied video games or camcorders
- 7-1 Index
An alphabetical listing of important topics

- 1-2 Safe Operation of Your InVue II™ Video System
- 1-3 Deployment and Stowing of Your LCD Monitor
- 1-4 Manual Controls of Your LCD Monitor

1-1

SAFE OPERATION

Before You Drive

What You Should Know About Having and Using the InVue II™ Video Entertainment System in Your Vehicle

The InVue II™ Video Entertainment System is designed for rear passengers only. The driver cannot safely view the FPD (flat panel display) while driving and should not attempt to do so. Many states have laws that restrict using a device in the vehicle that receives a television broadcast.

In most states it is unlawful for the FPD screen to be visible to the driver, while other states have yet to address this issue. The screen can not be located at any point forward of the back of the driver's seat in: AL, AZ, CA, CO, LA, MA, MD, MN, NH, NC, OR, PA, SC, WA and WI.


The following guidelines will help you operate your video entertainment system safely and legally:

Never try to drive and view the screen.
Keep the back of the driver's seat forward of the screen.

If you have a question, please call the Rosen Tech Center at 1-888-883-2790.


DEPLOYMENT AND STOWING

Depending on your type of vehicle, and the particular InVue II™ System installed, the InVue II™ screen will deploy and stow in one of the following ways:

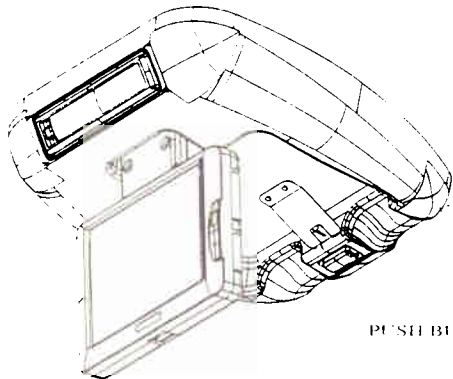

PUSH BUTTON

The push button on the overhead console releases the InVue II™ screen just enough so that it can easily be positioned for optimal viewing. To turn the system on, press any (of the four) buttons on the side of the screen or use the remote control.

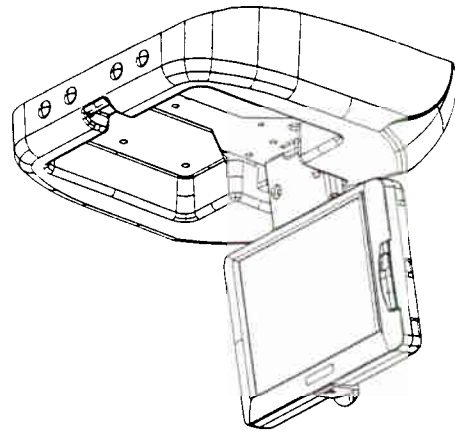

PULL LATCH


Your system may have a pull latch located on the bottom of the case. Pull latch down to deploy and position the screen. Turn the system on and the screen will display the last video signal chosen. System operation is identical with either type. (See 2-6 configuring your system).

1-3

MANUAL CONTROLS

The buttons located on the side of the screen perform many of the same functions as the system remote.

By depressing any of these buttons once, the OSM displays the button's function. Press again and the function is carried out.

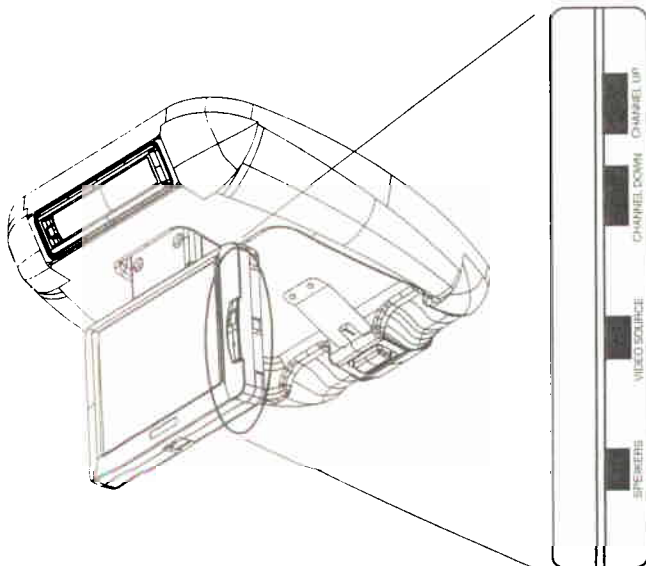

CHANNEL UP/DOWN

Scrolls up and down preset TV channels or scrolls up and down TV channels (see configuration settings).

VIDEO SOURCE

Selects video source

→ TV → VCP → AUX

SPEAKERS

Selects audio on or off to the speakers of the vehicle sound system. Also, pressing and holding this button for 5 seconds will turn off the system.

2-2 System Remote Control

2-4 OSM (on-screen menus)

2-1

SYSTEM REMOTE CONTROL


The system remote control is the heart of your entertainment system. It controls the majority of your system's functions.

Video selection may be made by this remote control. The TV Tuner is accessed by remote for channel selection and for fine tuning.

When your system is equipped with a Rosen video cassette player, the VCP will operate using the same system remote control.

All OSMs (On-Screen Menus) are controlled by the system remote control.

The system remote control is infrared and therefore must be aimed toward the flat panel display.

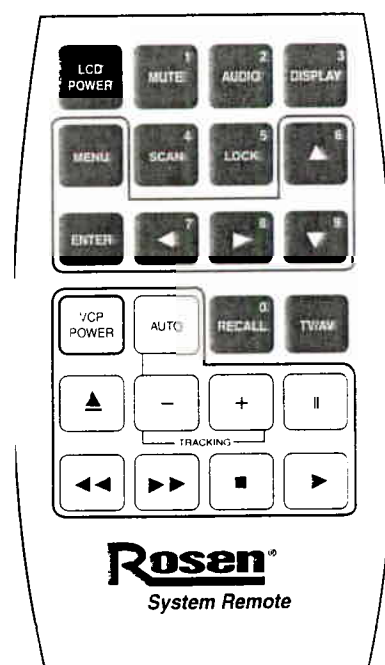

SYSTEM REMOTE CONTROL

- LCD POWER** This button sends power to the flat panel display when pressed. It also turns off the power to the entire system.
- MUTE** This button mutes audio to both the headphones and the factory sound system.
- AUDIO** This button allows the sound of the video system to be heard through the vehicle speakers, the headphones, or both.
- DISPLAY** This button removes the OSM from the flat panel display and brings the user back to the video source last selected. It will also display the TV channel while viewing the television.
- SCAN** (Television function, see section 5-1)
- LOCK** (Television function, see section 5-1)
- AUTO - +** Tracking control of VCP

TV/AV This button selects the video source.



The OSM displays the video sources as:
TV # channel for television
AV1 for video cassette player
AV2 for the auxiliary video
(see auxiliary equipment)

MENU This button displays the OSM.
(See section 2-4, On-Screen Menus)

RECALL (Television function, see section 5-1)

VCP POWER Turns VCP on and off.

- ▲ VCP Eject ◀◀ VCP Rewind
- VCP Stop ▶▶ VCP Fast Forward
- ▶ VCP Play || VCP Pause

2-3

OSMs (ON-SCREEN MENUS)


The engineering that went into the InVue II™ OSM makes it very unique and easy to use. The following steps will guide you through the OSM.

Pressing the **MENU** button on the system remote will display the OSM. When in the AV1 or AV2 selection and you press **MENU**, the display looks like the illustration at right:

From here you can scroll the position arrow up and down using the ▼ and ▲ buttons on the remote.


By pressing the **ENTER** button you can go to the next screen of the OMS for picture adjustment, audio settings or options.

The ▶ button will perform the same function as the **ENTER** button. (You may find using this button to be much easier and quicker since you will use it in many of the adjustments in the next menu.)



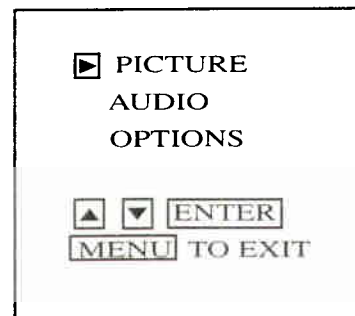


OSMs (ON-SCREEN MENUS)

Selecting PICTURE will display this sub-menu. You can scroll up or down to make your selection for adjustment. Brightness, color, tint and contrast are preset at the factory. There is a "Restore to Factory" selection under OPTIONS which will restore the factory settings.


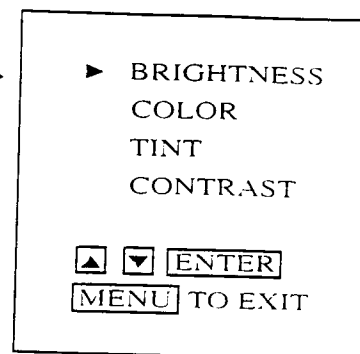


The PICTURE adjustments are displayed as follows:

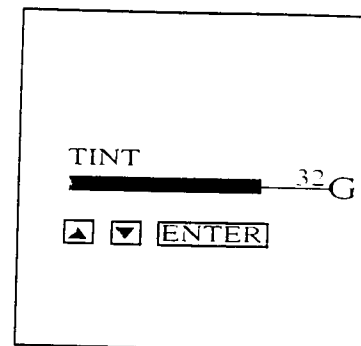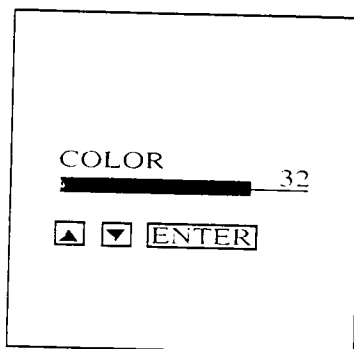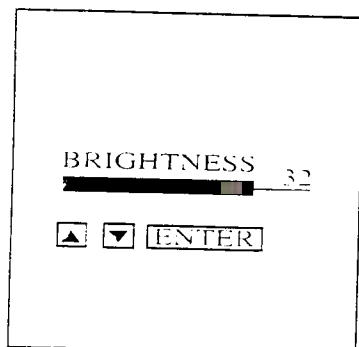

2-5

OSM (ON-SCREEN MENUS)

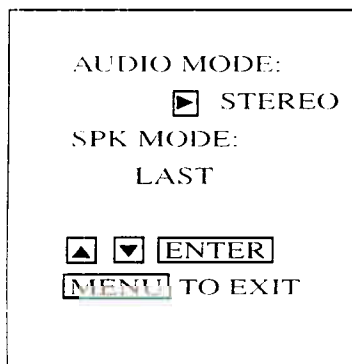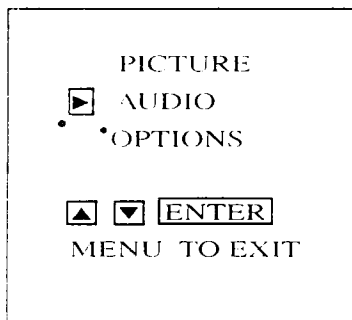

By selecting AUDIO, you can change settings that configure the tuner and initial speaker selection of your InVue system.

AUDIO MODE - configures the tuner to receive STEREO or SAP (second audio program) broadcasts. This setting effects all channels.

NOTE: Configuring your system to SAP will effect **ALL** TV channels. If any of these channels do not broadcast audio using SAP, audio will not be present. In this mode, SAP will be displayed with the channel number on the screen. SPK MODE (speaker mode) allows your to configure your InVue system to initialize with your individual preference of audio modes.

LAST - System audio will be configured in the same mode as the system was previously operating. This setting allows audio through the factory sound system or headphones, whichever was LAST set.

ON - Sets the audio to play through the factory sound system every time the InVue system is turned on. (Tune to either 88.7 or 89.1 FM, depending on how your installer configured your system.)




OFF - This selection will cause the audio to be heard only through the headphones when InVue system is turned on.

* To change the audio mode after the InVue system has been turned on, press the SPEAKER button located on the side of the display screen or press the AUDIO button on the remote control.

* The SPEAKER must be OFF to allow radio reception.

2-6



OSMs (ON-SCREEN MENUS)

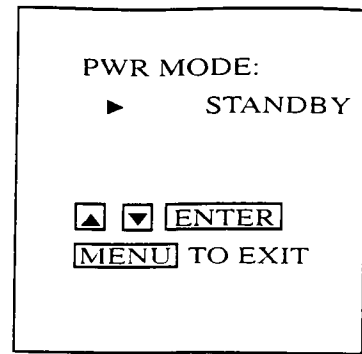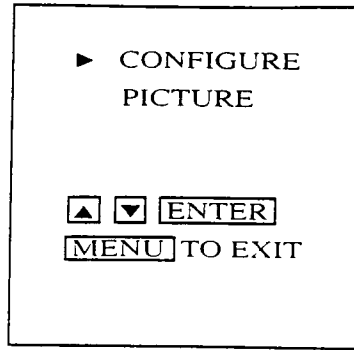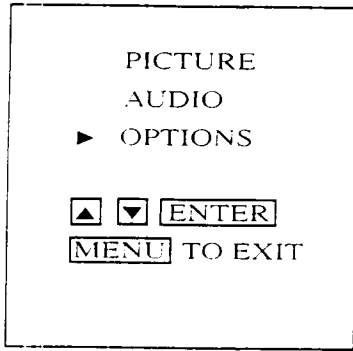

Choosing OPTIONS - CONFIGURE provides setting that will configure the power mode. Your InVue system should be configured to the STANDBY powered mode. The STANDBY selection enables your InVue system components to be powered and available in a STANDBY mode when you turn the vehicle's ignition switch. To turn the InVue system on, press any (of the four) buttons located on the side of the display screen or press the LCD POWER button on the remote control. The LCD POWER button on the remote control will also turn the InVue system off. You should turn the InVue system off prior to stowing the system. When the InVue system is on, you can momentarily turn the ignition switch OFF and then to ACC without disrupting normal system operation. The InVue system will power down approximately six second after the ignition is switched off. This InVue model should not be used in the INSTANT mode.

2-7

OSMs (ON-SCREEN MENUS)

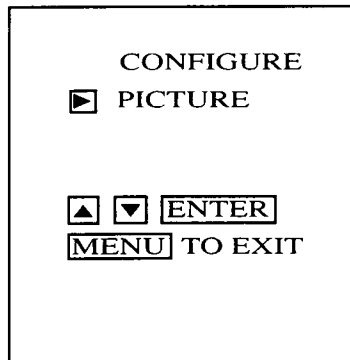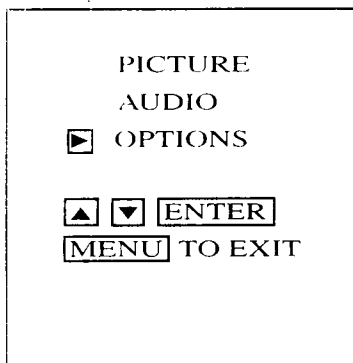

Selecting OPTIONS - PICTURE allows you to either save or restore the picture adjustments you have made. To save your settings, select SAVE USER and press ENTER. Now your brightness, color, tint and contrast are saved.

Hint: This option works well for a night setting when you may want to reduce the brightness of the display. The factory settings are based on normal daytime viewing. By selecting RESTORE you can instantly retrieve the factory settings or your saved selections.


2-8

3-2 Operation and features of the Rosen RVP9800 video cassette player

3-1

THE ROSEN RVP9800 VCP

To load a VHS tape into the VCP, gently insert the cassette, label-side up, into the cassette compartment until it stops. The VCP will continue loading the tape and begin playing it automatically.

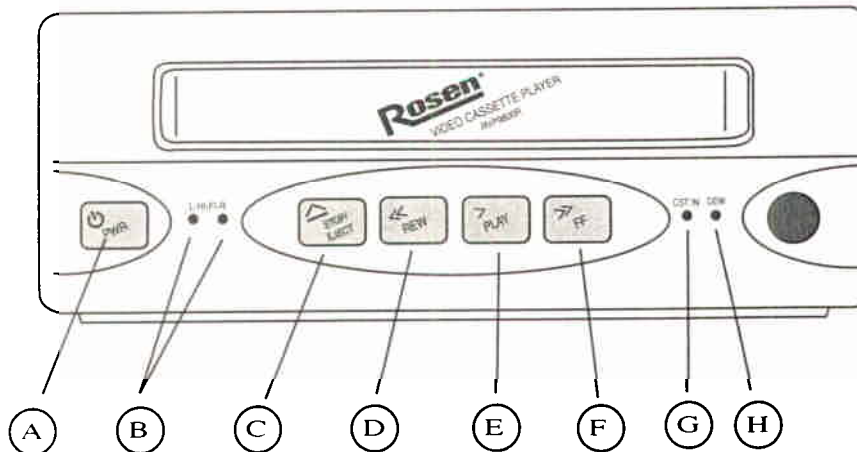

- A. **POWER** button: Press this button to turn the VCP on or off. You can also use the remote control.
- B. **Stereo Hi-Fi L/R indicators**: Both indicators glow when a Hi-Fi stereo video cassette is being played.
- C. **STOP/EJECT** button: Press this button once to stop and a second time to eject a cassette from the VCP.
- D. **REW** button: Press this button to rewind the tape. You can view the tape while in the rewind mode as the tape plays.

ROSEN RUP9800 VCP

- E. **PLAY button:** Press this button to play a video tape. If a video tape is loaded, pressing this button will power the VCP.
- F. **FF button:** Press this button to fast forward the tape. You can view the tape in fast forward if the tape is playing.
- G. **Cassette IN indicator:** This indicator glows when there is a video cassette loaded in the VCP.
- H. **DEW indicator:** When the indicator flashes, the Dew Sensor had been activated.

When damaging-causing moisture condensation is detected within the VCP, the DEW Sensor circuit automatically prevents the VCP from accepting or playing tapes. When the dew sensor has been activated the DEW indicator will flash. To prevent damaging a video tape that is in the VCP when the indicator is flashing, press EJECT and remove the tape. Then, be sure the VCP is on so it can warm up and dry any accumulated moisture. When the DEW indicator stops flashing, the VCP will return to full operation.

3-3

SYSTEM AUDIO

4-2 Wireless Headphones



4-3 Factory Sound System Adapter (System Audio Modulator)

WIRELESS HEADPHONES

The audio from of your InVue II™ system can be experienced in two ways. Wireless infrared headphones allow rear seat passengers to listen to the video system without disturbing front seat passengers.

To select the wireless headphones, be sure the on/off switch is in the 'on' position and the volume is turned all the way down. On/off and volume controls are located on the right ear piece of the headphones. The wireless headphones will work from any position behind the front seats. The headphones are equipped with an automatic on/off switch mounted in the right ear piece. This allows them to turn on only when placed on your head and shut off when removed from your head.

WARNING: To avoid potential damage to your hearing, always turn the headphone volume all the way down before placing them over your ears. Once they are on, adjust the volume to a comfortable level.

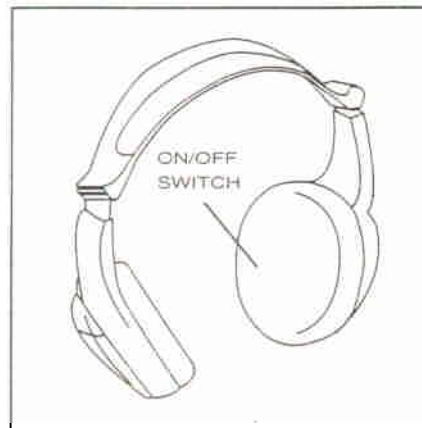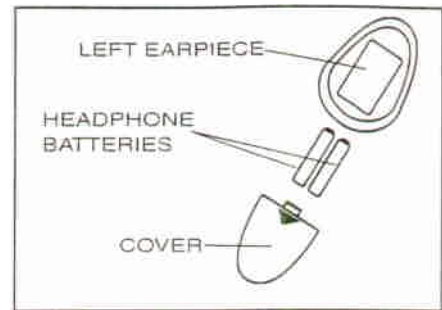

HEADPHONE BATTERIES


Direct sunlight or very bright light may reduce the sensitivity of the headphones. Also be sure the headphone batteries are not discharged. The battery compartment is located on the left earpiece. Using two "AAA" batteries, follow the diagram to replace the batteries.

4-2

SYSTEM AUDIO MODULATOR

When desired, InVue II™ system sound can be enjoyed by all passengers in your vehicle through the factory radio sound system. Even though you cannot see the Rosen Audio Modulator because it is installed behind the dashboard, it enables the audio signal from the video source you select to work with your vehicle radio. Select the AUDIO button on the remote or the SPEAKER button on the LCD case. The monitor will display "SPEAKER ON". Then just tune to 88.7 FM to hear the sound and use the radio controls to adjust volume. You may want to preset one of your radio buttons to 88.7 FM to make operating the system quick and easy.

You also are able to pre-select what mode your system's audio will power up in. Refer to OMS 4-3 for configuring the audio of your system.

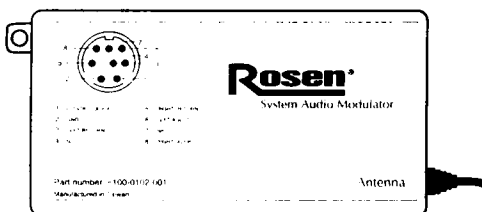

NOTE: To avoid interference with other radio broadcast stations in your area, your installer may have chosen an alternate frequency of 89.1 FM for your system. Contact your installer/dealer for more information.

4-3

TU TUNER

- 5-2 TV Tuner OSM (On-Screen Menu)
- 5-6 TV Tuner Remote Control Functions
- 5-7 TV Antenna System

5-1




TU TUNER OSM

▶ PICTURE
AUDIO
OPTIONS
TUNING


▲ ▼ ENTER
MENU TO EXIT

Pressing the MENU button on the system will display the OSM. If the system is in the TV mode and you press MENU, the display looks like the diagram to the left. From here you can toggle the position arrow up and down using the ▼ ▲ buttons on the remote. By pressing the ENTER button, you can go to the next screen of the OSM for either picture adjustment, audio settings, options, or tuning. Using the ▶ button in this stage will preform the same function as the ENTER button. (You may find using this button to be much easier and quicker since you will use it in many of the adjustments.)

TU TUNER OSM

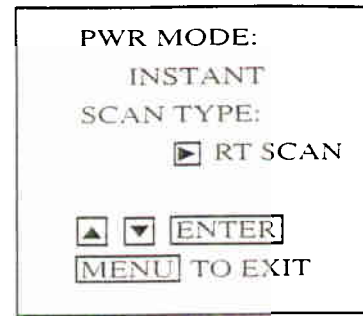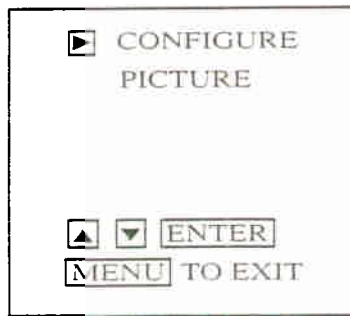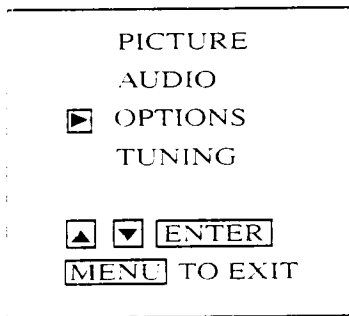

Choosing the **OPTIONS** menu (diagram 1, above) and moving into the **CONFIGURE** menu will allow you to set the **SCAN TYPE** to either **RT SCAN** (Real Time Scan), or **PRE-SCAN**.



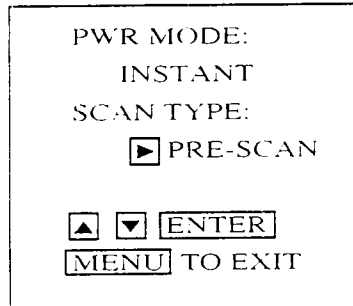


RT SCAN sets the tuner to always scan to the next strongest signal when tuning up or down. This will come in handy when vehicle is in constant motion.

PRESCAN will automatically scan through all 69 channels, lock and store the strongest signals. Once the **PRESCAN** cycle is complete, use the **UP/DOWN** to instantly scroll through the preset TV channels. The **PRESCAN** will take approximately 4 to 12 seconds depending on how many signals it finds. Refer to 5-5 "Lockout features" for locking out undesirable channels.

5-3

TU TUNER OSM

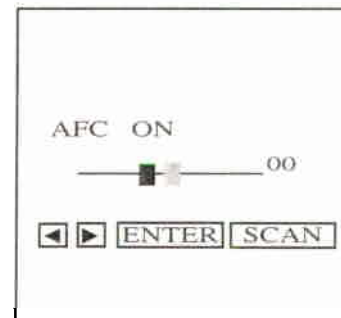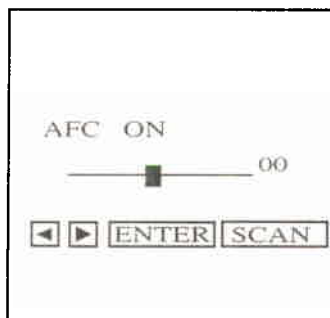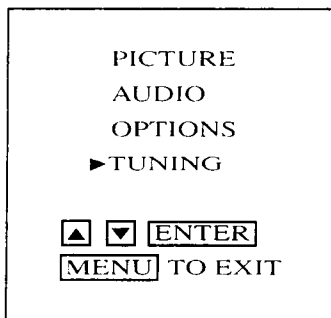





Choosing the **TUNING** menu will display the **AFC** (Automatic Fine Tuning Control) screen. In this menu, you can fine tune with the **◀ ▶** buttons. You can fine tune only the particular TV channel that you have selected on screen. The **AFC** will display **OFF** and a green indicator will appear and move right or left as you fine tune. The **00** display will monitor your movement. The number will increase (+) when moving to the right and decrease (-) when moving to the left. To hold the fine setting, press **ENTER** and the blue indicator will move on top of the green and the setting will be saved. From this point, by using **◀ ▶** you can fine tune further with the green indicator. Pressing the **SCAN** button will allow the green indicator to use **00** as the starting point for additional fine tuning. To retain the fine tuned signal, push **ENTER**; your selection will be saved. You can then scroll up or down to the next channel and fine tune it. Pushing **MENU** twice or **DISPLAY** once will bring you out of the fine tuning menu. Anytime the tuner goes through the **SCAN** function, all fine tuning is reset. (See 5-5 for **SCAN**)


TV TUNER REMOTE CONTROL FUNCTIONS

The system remote control is the main control for the television tuner.

Other than the two manual controls on the display for channel up and down, all other tuner functions are controlled by the system remote control. This section of the manual will explain the tuner control buttons.

  LOCK This button performs a unique function that is found only on the InVue II™ system. Pressing it will lock out undesirable channels that the tuner may have selected even though the reception is weak. **LOCK** allows you to skip them.

When you press the **LOCK** button, a blue screen will appear and **CHANNEL XY LOCKED** will be displayed. Once the undesirable channels are locked, they will not appear in sequence during the up/down scan   selection. To unlock a channel, use the up/down channel selector   to select the channel and press **LOCK** again. To unlock all channels, push the **SCAN** button.

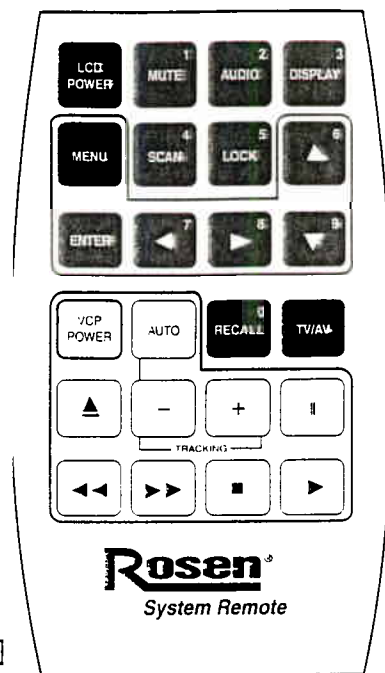

5-5

TV TUNER REMOTE CONTROL FUNCTIONS

SCAN While in TV tuner mode and with the system configured to **PRE-SCAN**, this button will scan through all 69 channels and preset the strongest channels to memory. When the system is configuring to **RT SCAN**, this button will unlock all channels. (See 5-3 for **SCAN TYPE**)

NUMBERS There are 10 selections on the remote with blue numbers located on the top right corner of the buttons. These are direct access channel entry buttons. They allow you to access a numbered channel directly instead of using the up and down buttons. To use these, press the **ENTER** button first. A blue screen will be displayed with the words **ENTER CHANNEL NUMBER** followed by the number 0 ...9. When this screen appears, enter the desired channel number with two digits. (example: channel twelve is 12 and channel two is 02.)

5-6

TU TUNER REMOTE CONTROL FUNCTIONS

DISPLAY During the tuner mode, this button when pressed will display the TV channel while viewing the television. It will also exit the user out of the fine tuning OSM.

RECALL The RECALL button should be thought of as a recall/memory button and **not** last display channel recall. It will allow the toggling back and forth between two stored channels. When one of the desired channels is displayed on the panel, press RECALL. The channel will be saved and another channel will appear. Channel surf until the second desired channel is displayed and press RECALL again. Now when you press RECALL, you will be able to switch back and forth between the two selections.

5-7


OPTIONAL EQUIPMENT

6-2 Connections for Game Systems and Camcorders

6-3 AC Power Inverter

6-4 Additonal Headphones

CONNECTING GAME SYSTEMS OR CAMCORDERS

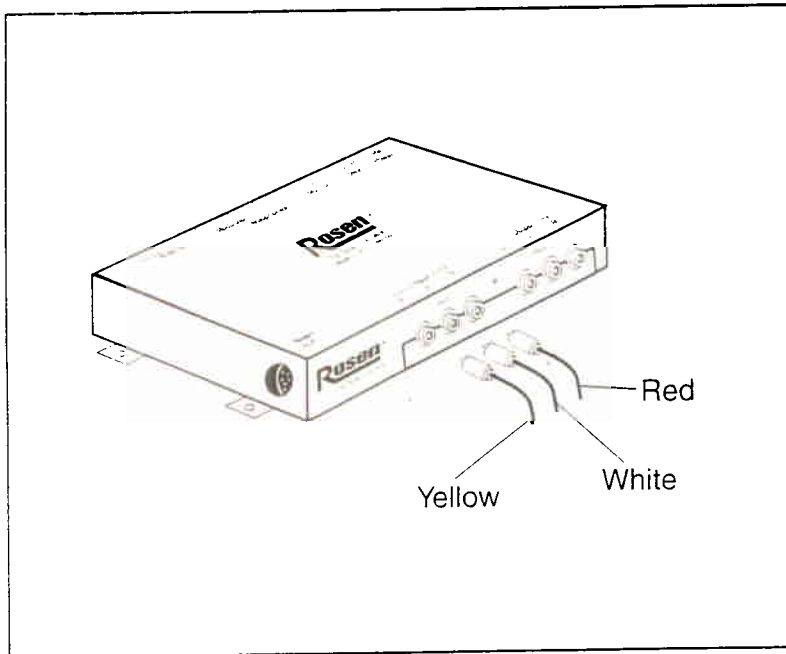

Connecting game systems or camcorders is as easy as matching the colors of the RCA plugs on the device to the colors on the INPUT jacks on the TV Tuner Interface.


- Yellow -> Yellow (Video)
- White -> White (Left Audio)
- Red -> Red (Right Audio)

With some games systems, an adapter is required. These adapters are usually available from the game system supplier.

Contact your dealer / installer if you need assistance.

6-2

AC POWER INVERTERS

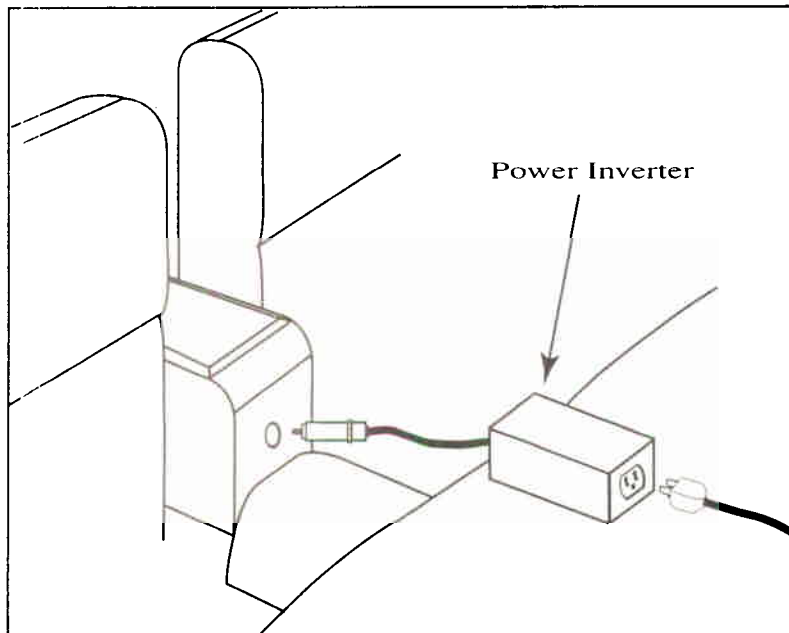

Some video game systems, camcorders, and other video devices require 120 VAC "household" current instead of the 12 VDC supplied by your vehicle. These devices require the use of an AC power inverter (not a *converter*) to change the vehicle's 12 VDC to 120 VAC.

Inverters usually plug into the vehicle's cigarette lighter or 12 VDC power point and the video device plugs into them. **It is absolutely essential that the inverter be rated to supply AC power equal to or greater than the power requirement (in watts) of the video device. (See specification below.)** These power inverters are available from your dealer/installer.


Specification:

Most game systems require an inverter supplying a minimum of 140 watts output

6-3

ADDITIONAL HEADPHONES

Additional sets of wireless headphones are available by contacting your dealer/installer or by calling Rosen Products at 1 (800) 284-7677.

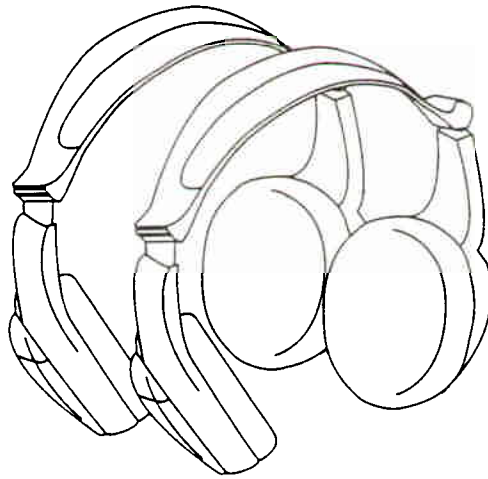

6-4

INDEX

A		F		P	
A power inverters		Fine tuning	2-2	Picture adjustment	2-4, 2-6
Purchasing	6-2	Flat panel	1-2, 2-2	PICTURE function	2-8
Connecting	6-2	H		Power	2-3
Additional headphones	6-3	Headphones		POWER mode	2-7
Audio on/off	1-4, 2-3, 2-6	Selecting	2-3	Preset channel	1-4
AUDIO mode	2-6	I		R	
Audio Modulator		Infrared	2-2	RECALL function	2-3
Configuring	4-3	INSTANT function	2-7	Remote control	
Description	4-3	L		Description	2-2
Frequencies	4-3	LAST function	2-6	Features	2-3
Selecting	4-3	LOCK function	2-3	RESTORE function	2-8
Auto Tracking	2-3	M		S	
AV1 / AV2 selection	2-4	Manual controls		Safe operation	1-2
B		Location	1-4	SAP	2-6
Brightness	2-5	MENU function	2-3, 2-4	SAVE USER function	2-8
C		MUTE function	2-3	SCAN function	2-3, 5-6
Channel Selection	1-4, 5-5	O		Speaker selection	2-3
Color adjustment	2-5	OSM		SPEAKER mode	1-4, 2-3, 2-6
Configuring your system	2-6	Location	1-4	STANDBY function	2-7
Contrast adjustment	2-5	Remote control	2-2	Stereo	2-6
D		Clearing	2-3	Stowing	1-3
Deployment and storage	1-3	CONFIGURE function	2-7	T	
E		Description	2-4	Technical help	1-2
ENTER command	2-8	OPTIONS function	2-7	Tint adjustment	2-5
		Optional Equipment	6-1	TV / AV selection	2-3

INDEX

T		V		W	
TV tuner		VCR controls	2-3	wireless headphones	
remote control	2-2	VCR face controls		Battery installation/removal	4-2
LOGN	3-6	CASSETTE IN	3-3	On/off switch	4-2
LOGS	3-6	DEW	3-3		
DISPLAY	3-7	FAST FORWARD	3-3		
DIRECT CHANNEL ENTRY	3-6	PLAY	3-3		
T		POWER	3-2		
Power ON		REWIND	3-2		
HFD control	3-4	STOP/EJECT	3-2		
AUDIO function	2-6	VCR power on/off	2-3		
CONFIGURE function	3-3	Video Cassette Player (VCR)	2-2		
OPTIONS function	2-6, 3-3	video source selection	1-4		
PICTURE function	2-4, 2-6, 2-8				
POWER mode	2-7				
AP STEERED	2-6				
CHN TYPE function	3-3				
RT scan	3-3				
Pre-tscan	3-3				