

GETTING STARTED

Selecting a Video Source

From your navigation system, select Rear Source from the Menu page.



Choose from one of the available options.


Note: Options will vary depending on the unit installed.



Your selection will automatically display on the Rear Monitor System.



CONTROLLING THE SOURCE

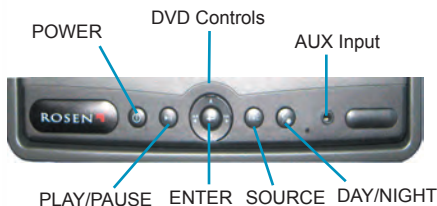

SYSTEM SETTINGS

Setting The Headphone Channels

Enter setup mode by pressing the PLAY/PAUSE and SOURCE button simultaneously for several seconds. Use the left and right arrows to switch between Ch. A/B/OFF.

Adjusting The Display

Press ENTER for the settings menu. You can adjust the brightness, color, tint, contrast and screen mode (Normal/Wide). RESET will change settings back to default.

Button Functions

POWER: Turn system On/Off

PLAY/PAUSE: Play or pause DVD

DVD Controls: Select various DVD functions such as previous/next chapter, scene selection, etc.

- **Chapter Prev/Next** -Long press for DVD
- **Up Arrow** -Long press for root menu

ENTER: Confirms selection in DVD mode or hold for several seconds to enter display menu

SOURCE: Select between Main and AUX screen

DAY/NIGHT MODE: Select for screen dimmer

