

TURN ON THE SYSTEM

- Turn vehicle ignition to **ON** or **ACC**.
- Press **POWER** on the front display (FIG 1) or wireless remote (FIG 2) to turn on each system.

FRONT CONTROL PANEL



FIG 1 Power Enter Mode Speaker

REMOTE

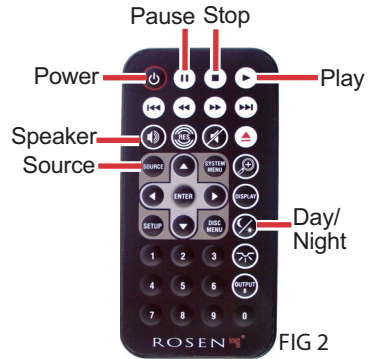


FIG 2

PLAY A DVD OR CD

- Press and release the **MODE** button on the front control panel (FIG 1) or the **SOURCE** button on the remote control (FIG 2) until "INTERNAL DVD" or "CD" appears.
- Press on the upper center of the display to open the system and access the DVD/CD slot.
- Insert a disc into the disc slot with the label facing towards you (FIG 3) - most discs will load and play immediately. Do not force disc into slot. If a DVD/CD menu appears on the screen, press **PLAY** (FIG 2) or **ENTER** (FIG 1) as instructed on the screen.
- Move the headrest with both hands (FIG 3) to obtain the best viewing angle.

HEADREST

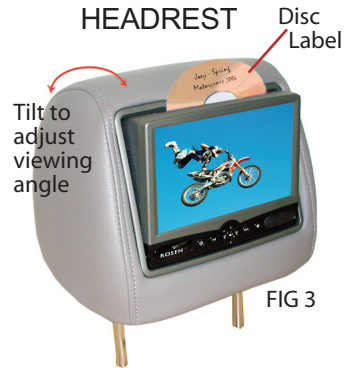


FIG 3

USE THE HEADPHONES

- Turn on by pressing the **OFF/ON** button, located on the ear piece. The power LED on the ear piece should illuminate - if not, check that the batteries have a charge and are inserted properly.
- Turn down the volume knob on the ear piece. Put over ears and re-adjust volume.
- The headphones each have a two-position slide switch labeled "CH.A/CH.B." They must have a clear line of sight to the headrest monitor and must be switched to the designated A/B channel to operate properly.



FIG 4


PLAY INTERNAL VIDEO GAMES

- Press any button on the game controller to activate. The Controller LED will blink when ready.
- Press the **MODE** button on the front control panel (or **SOURCE** on the remote control) until "INTERNAL GAME" appears on the screen.
- Set the game controller to channel A or channel B depending on which headrest unit you will play on.
- Use the game controller's left and right arrow keys to choose a game.
- Press the **START** button on the game controller to choose the game.
- Use the "A & B" buttons for fire, jump or other action.
- Press **RESET** to return to the main menu.

GAME CONTROLLER
FIG 5



LISTEN OVER VEHICLE SPEAKERS

- Press the **SPEAKER**  on the remote (FIG 2) or on the front control panel (FIG 1). "SPEAKER SOUND ON FM __. __ PRESS LEFT OR RIGHT TO ADJUST" will appear on the screen as shown at right.
- Turn vehicle's radio on, and tune to the FM frequency displayed on screen. If radio interference is heard, try another frequency (see pages 13 & 16 in your Owner's Manual for more information).

