

PLAY INTERNAL VIDEO GAMES

- Press any button on the game controller to activate. Make sure that the controller A/B switch is set to "A." The Controller LED will blink when ready.
- Press the **SOURCE** button on the front control panel or on the remote control until "INTERNAL GAME" appears on the screen.
- Use the game controller's left and right arrow keys to choose a game.
- Press the **START** button on the game controller to choose the game.
- Use the "A & B" buttons for fire, jump or other action.
- Press **RESET** to return to the main menu.

GAME CONTROLLER

FIG 5



LISTEN OVER VEHICLE SPEAKERS



- Press the **SPEAKER**  on the remote control (FIG 2) or press and  on the control panel (FIG 6) for five seconds. The screen will display: "SPEAKER SOUND on 87.9 Press ◀ ▶ to adjust"
- Turn the vehicle's radio on, and tune to the FM frequency set by the installer (*see Owner's Manual for more detail*).
- Make sure radio and T10/T12 are on and set to the same FM frequency.



FIG 6