 


TURN ON THE SYSTEM


- Turn vehicle ignition to **ON** or **ACC**
- Press **OPEN** on the remote or the front control panel.

NOTE: The operating temperature range of the system is from 32° to 140° F.

FRONT CONTROL PANEL

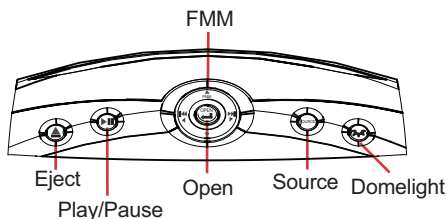


REMOTE

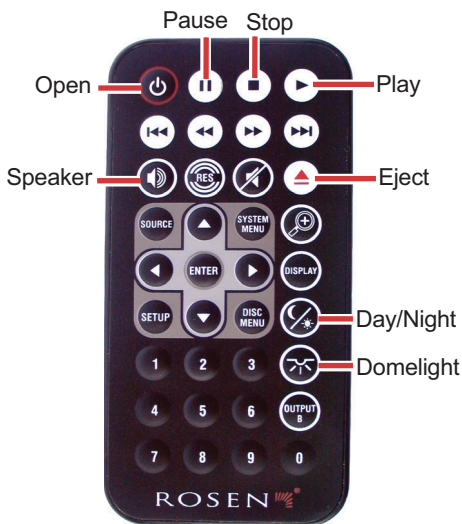

PLAY A DVD OR CD


- Press and release the **SOURCE** button on the remote or the front control panel until "INTERNAL DVD" appears.
- Insert a disc into the disc slot - most DVD's and all CD's will load or play immediately. If a DVD menu appears on the screen, press **PLAY** or **ENTER** on the remote or front control panel.

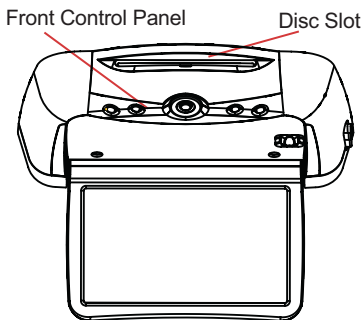

USE THE HEADPHONES

- a. Turn on by pressing the **ON/OFF** button, located on the ear piece. The power LED on the ear piece should illuminate - if not, check that the batteries have a charge and are inserted properly.
- b. Turn down the volume knob on the ear piece. Put over ears and re-adjust volume.

Note: The headphones must have a clear line of sight to the T8 screen to operate properly.

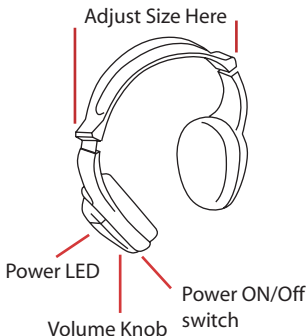

LISTEN OVER VEHICLE SPEAKERS

- a. Press the **SPEAKER** on the remote control or FMM on the control panel. "SPEAKER SOUND" will appear on the screen as shown at right.
- b. Turn the vehicle's radio on, and tune to the FM frequency set by the installer (see *Owner's Manual* for more detail).

