

## TURNING THE SYSTEM ON


- Use the system with the vehicle ignition ON or the ignition in ACC
- Slide the OPEN LATCH to release the monitor.
- Manually position it for optimum viewing.

*The unit will turn on automatically*



## PLAYING A DVD OR AUDIO CD

- The unit will default to INTERNAL DVD, if not, press the Source Button on the unit or remote to select INTERNAL DVD.
- Insert a compatible disc, label side up, into the unit.
- Some discs will start playback automatically, if not, follow the on screen instructions.

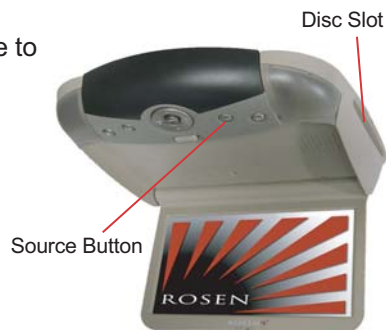

## USING THE WIRELESS HEADPHONES

- Press the ON/OFF button on the ear piece, the button will illuminate when the headphones are on.
- If the button does not illuminate, insure the batteries are fresh and installed correctly.
- Adjust the volume by turning the rotary knob.



## PLAYING THE INTERNAL GAMES

- Use the Source Button on the remote to select the INTERNAL GAMES.
- On the game controller, select "A" on the A/Off/B Switch.
- Press any button on the controller to verify the red Rosen Logo light flashes. If not, insure the batteries are fresh and installed correctly.
- Use the controller's LEFT/RIGHT to select a game, and START to begin play.
- Use the controller's "A" & "B" buttons for jump/fire/etc, and RESET to return to the main menu.



## PLAYING AUDIO OVER THE RADIO

- Press the SPEAKER button to enable playback through the radio.
- Note the FM frequency displayed on the screen, and adjust the vehicle radio to the indicated FM frequency.
- Adjust the radio volume to the desired level.



*This sequence must be repeated each time the vehicle is turned off or the monitor is closed.*