


Rosen A8 DVD System Wiring Diagram

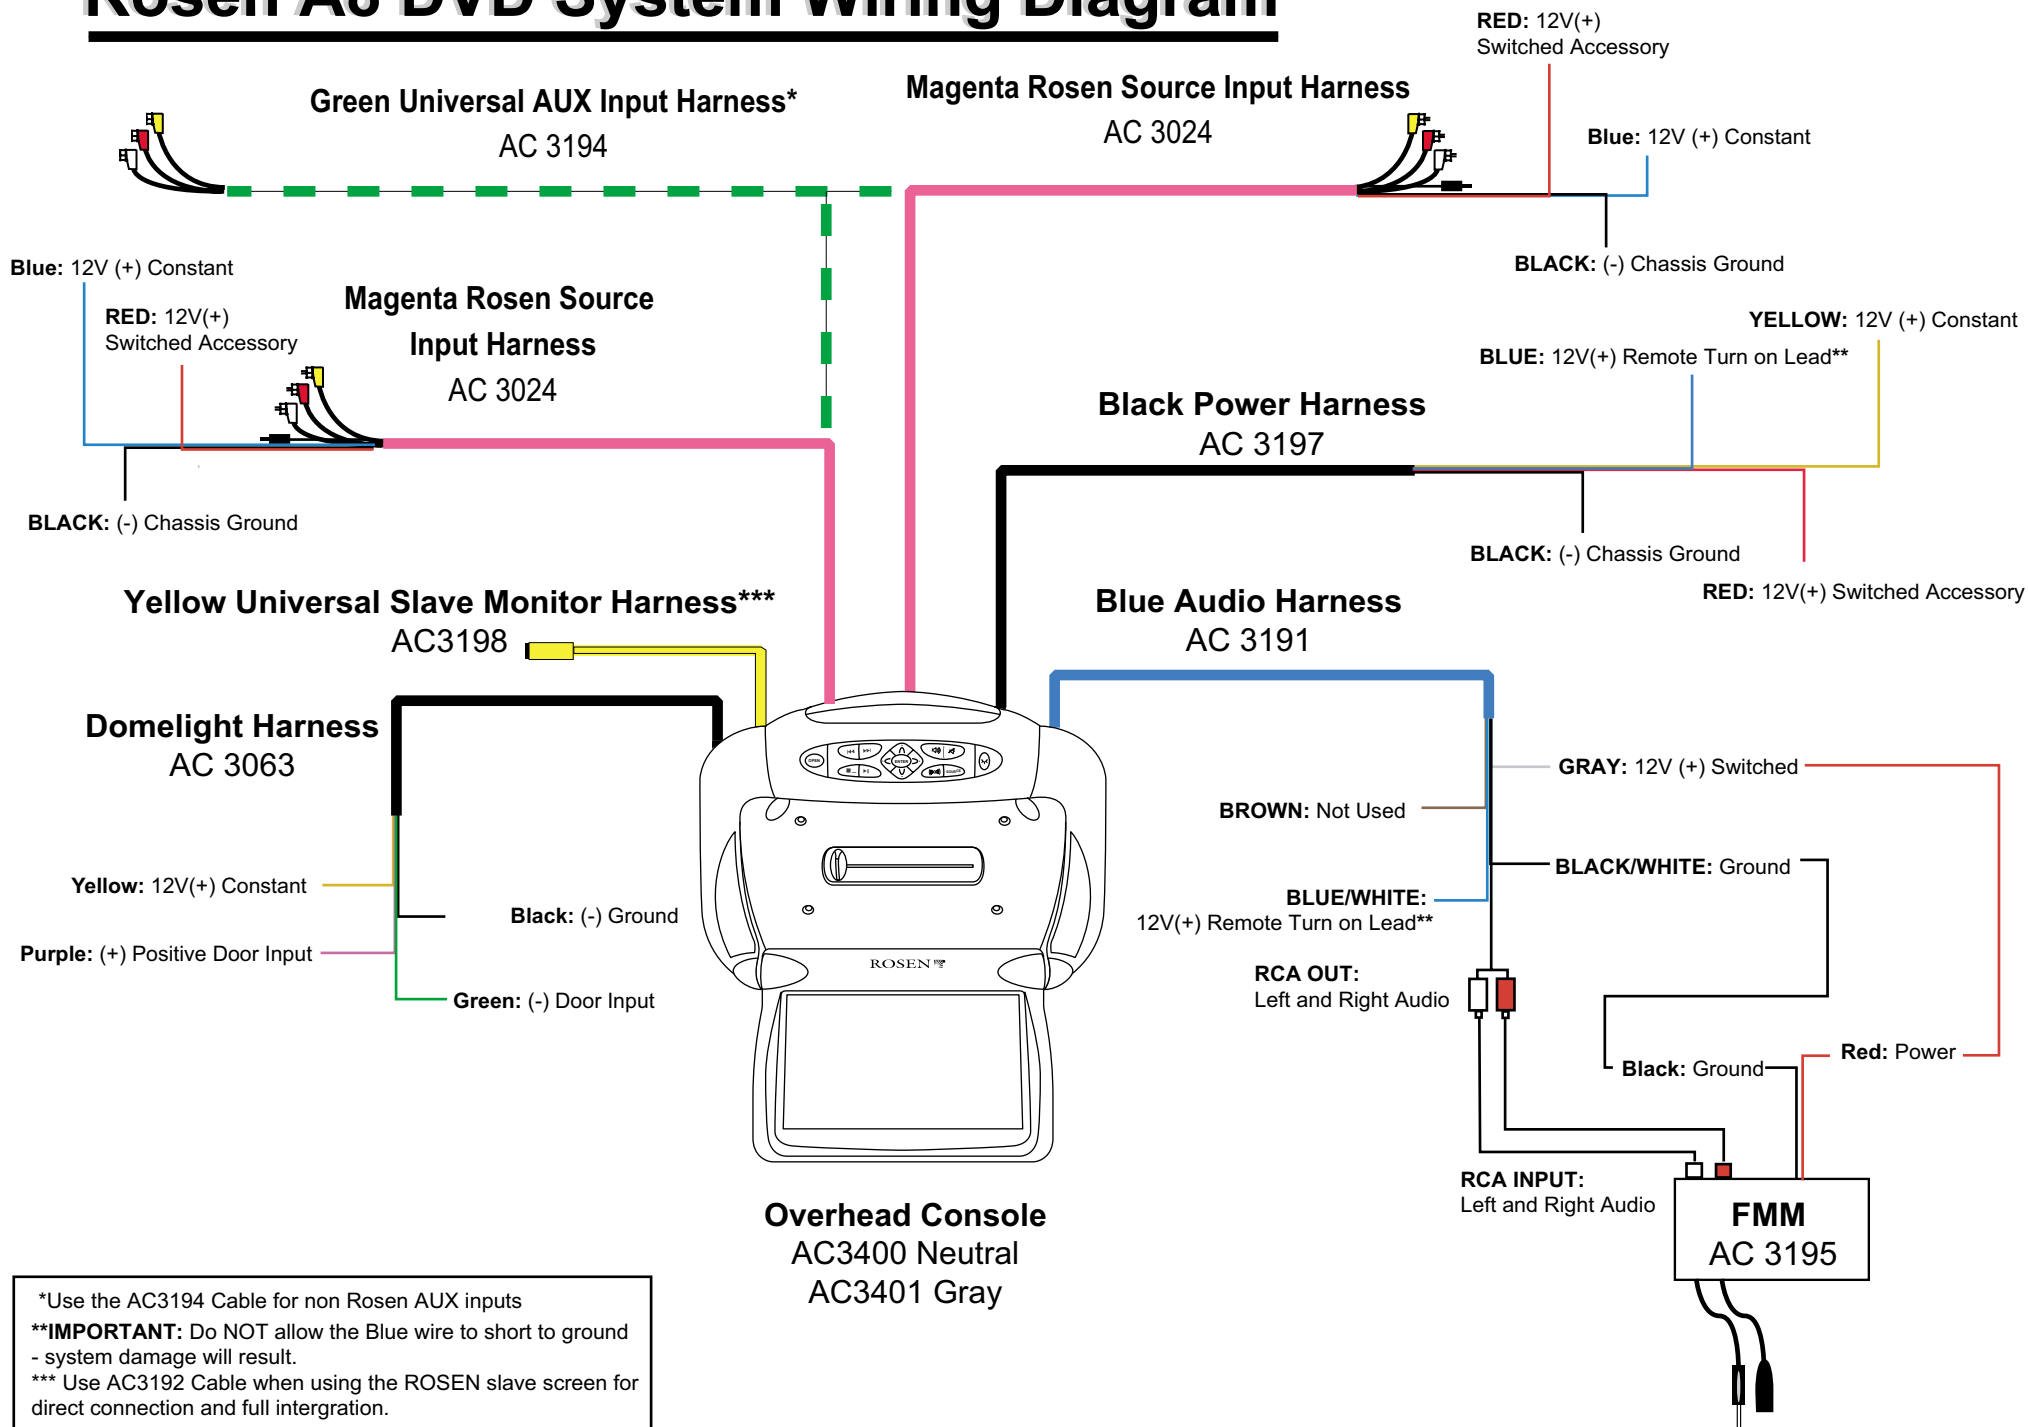

*Use the AC3194 Cable for non Rosen AUX inputs
****IMPORTANT:** Do NOT allow the Blue wire to short to ground - system damage will result.
 *** Use AC3192 Cable when using the ROSEN slave screen for direct connection and full intergration.

06/04