


# Rosen A9 DVD System Wiring Diagram

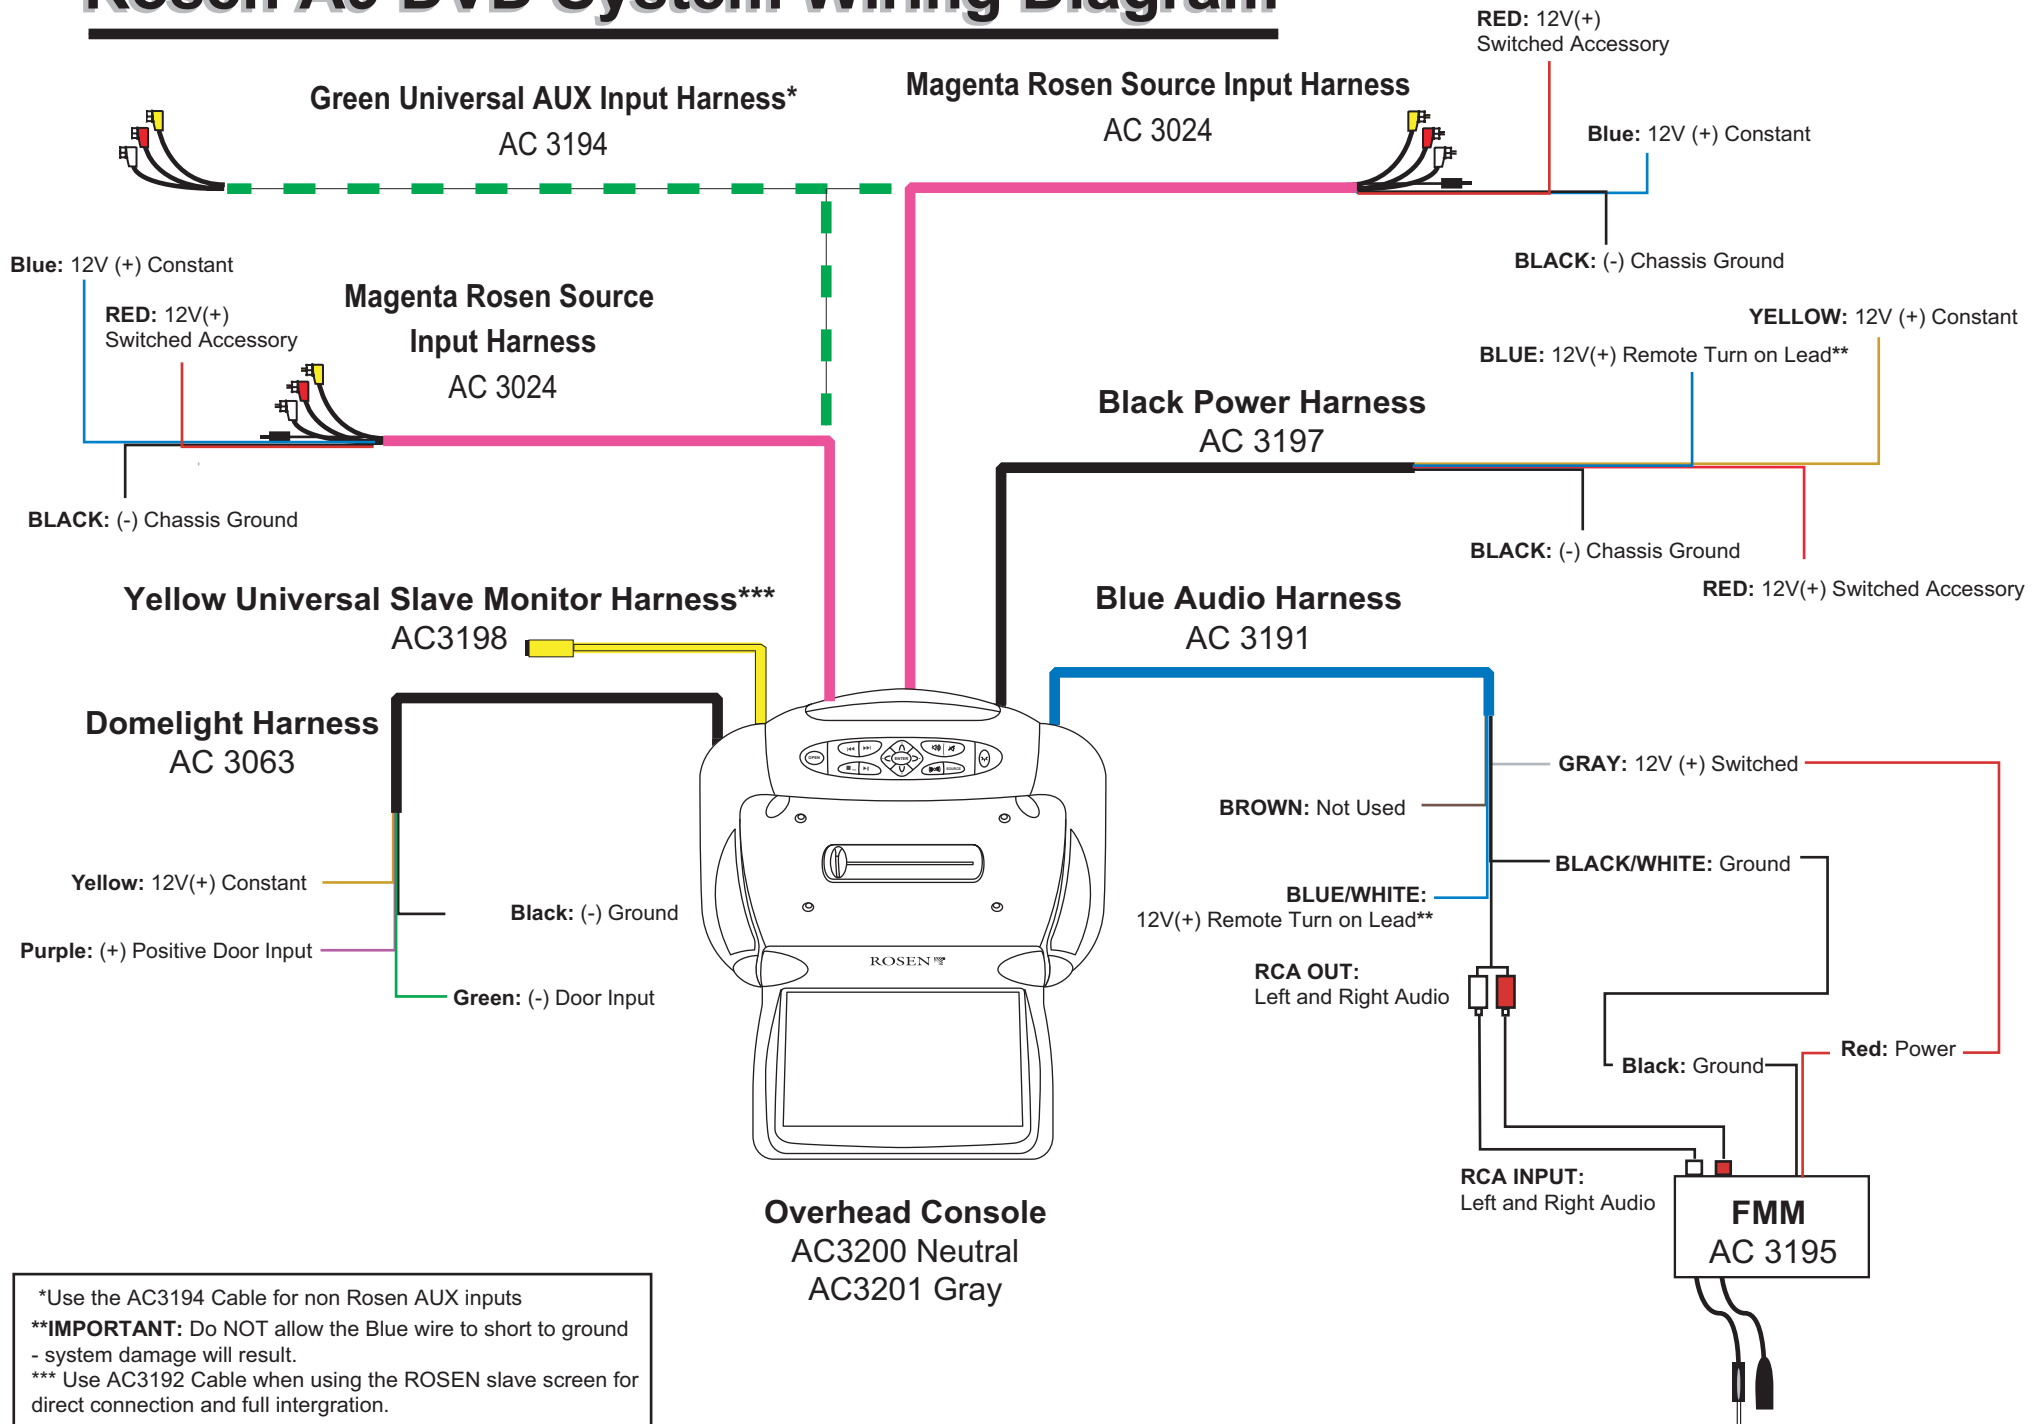

\*Use the AC3194 Cable for non Rosen AUX inputs  
**\*\*IMPORTANT:** Do NOT allow the Blue wire to short to ground - system damage will result.  
 \*\*\* Use AC3192 Cable when using the ROSEN slave screen for direct connection and full intergration.